microlab

microlab

Art For The Ear

SOLO3C

User's Manual

Microlab Technology Company Ltd.
Made in China

Hi-Fidelity Sound

All symbols or registered trademark rights belong to the respective brand holder or registered holder. Specifications are subject to change without prior notice. Some differences between picture and product may exist due to different production releases. All rights reserved.

Before use, please read the manual carefully

Important Safety Instructions

Caution:
TO reduce the risk of electric shock, do not dismantle the apparatus and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

Explanation of Graphical Symbols:

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNINGS:

1. Read Instructions—All the safety and operating instructions must be read before the product is operated.
2. Retain Instructions—The safety and operating instructions should be kept retained for future reference.
3. Heed warnings—All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions—All operating and use instructions should be followed.
5. Installation—Install in accordance with the manufacturer's instructions.
6. Power sources—This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. Grounding or polarisation—the appliance is not required to be grounded. Ensure the plug is fully inserted into the wall outlet or extension cord receptacle to prevent blade or pin exposure. Some versions of the product are equipped with a power cord fitted with a polarized alternating line plug (a plug having one blade wide than the other). This plug will fit onto the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarised plug. When using an extension power-supply cord or a power-supply cord other than that supplied with the appliance, it should be fitted with the appropriate moulded-on plugs and carry safety approval appropriate to the country of use.
8. Power cord protection—Power-supply cords should be routed so that they are not likely to be walked on, kinked or pinched by items placed on or against them, paying particular attention to cords from plugs, receptacles and the point where they exit from the appliance.
9. Overloading—Do not overload wall outlets, extension cords or multiple sockets, as this can result in a risk of fire or electric shock.
10. Ventilation—The product must be properly ventilated. Do not place the product on a bed, sofa, or other similar surface. Do not cover the product with any items such as tablecloths, newspapers, etc.
11. Heat—The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products) including amplifiers that produce heat. No naked flame sources, such as lighted candles, should be placed on the apparatus.
12. Water and moisture—To reduce the risk of fire or electric shock, do not expose the product to train, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near water—for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
13. Object and Liquid Entry—Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
14. Cleaning—Unplug the product from the wall outlet before cleaning. The cabinet of the subwoofer may be cleaned by dusting with a dry cloth. If you wish to use an aerosol cleaning spray, do not spray directly on the cabinet; spray onto the cloth. Be careful not to damage the drive units.
15. Attachments—Do not use attachments not recommended by the product manufactures, as they may cause hazards.
16. Accessories—Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
17. Moving the appliance—A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
18. Unuse periods—The power cord of the appliance should be unplugged from the outlet during lightning storms or when

Trouble Shooting

If you experience problems with your speaker, the following troubleshooting may help.

Troubles	Solution
Power LED won't light up	Check if the system is powered on
	Check the power plug is well connected
No Sound	Check if the audio source is working well
	Check if the audio and speaker cables are well connected
	Check if the volume is at right level
No Bass	Check if the Bass Volume is at right level
Sound is distorted	Check if the volume is at lower level
Remote control not working	Check if the battery is in the remote control
If the problem still exists, please contact the distributor or ask for professional service	

Technical Information

Features:

*Designed for Multimedia PC, High Performance to Price Ratio.

*Complete wooden box with elegant wooden finish make pure sounds,avoid sound mixture.

*The system is magnetically shielded which can be put near the monitor or TV, and without magnetic influence.

*The ultimate aim of Microlab R&D system is to inherit and carry forward the European musical culture style. To do this, all designs must be music-oriented and sourced from music and art. Having Microlab, you can enjoy European musical taste.

Specification

Amplifier specification:

AC IN	220V-240V~ 50Hz 260mA
Power output	30Wx2RMS
Driver unit:	6.5"x2+1"
Product size(DxWxH):	275x220x550mm

19.Servicing—Do not attempt to service this product yourself, as opening or removing covers may expose you to dang voltage or other hazards. Refer all servicing to qualified service personnel.
20.Please remove the power plug form the main power source or wall power source when not in use. When plugged i power source, the system is in standby mode, so the power is not entirely cut off.
21.Replacement parts—When replacement parts are required, ensure the service technician has used replacement p specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions ma result in fire, electric shock or other hazards.
22.Mains fuses—For continued protection against fire hazard, use fuses only of the correct type and rating. The corre specification for each voltage range is marked on the product.
23.Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speaker may be damaged when a peak level section is suddenly played.
24.The only means of completely disconnecting the product from the power supply is by removing the power cord fro wall outlet or the product. The wall outlet or the power cord entry to the product must remain freely accessible at al while the product is in use.
25.Try to install the product near a wall socket or exetension cord and shall be easily accessible.
26.The highest environmental temperature suitable for this product is 40°C.

Unpacking the system

Unpacking:

*Fold the carton flaps right back and invert the carton and contents.

*Lift the carton clear of the contents.

*Remove the inner packing from the product.

☺ We suggest you retain the packing for future use.

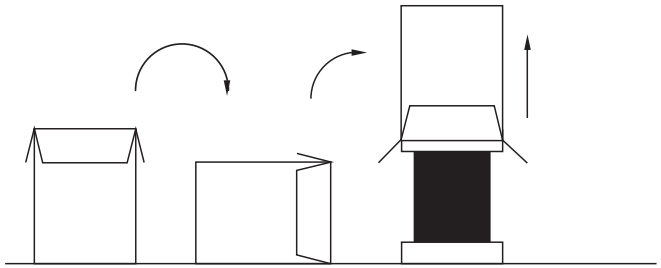

You should find following items while unpacking:

R Speaker 1pc
L Speaker 1pc
Remote control 1pc
3.5mm-2RCA audio cable 1pc
Speaker cable 1pc
User manual 1pc

Function Instruction

***Front View**

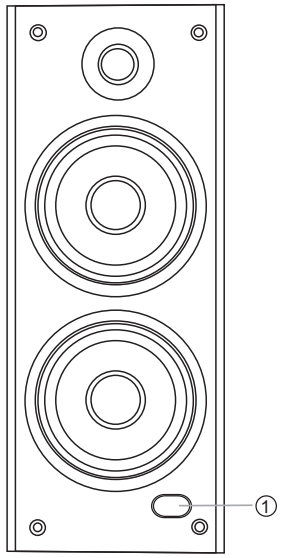

1.Remote Control Signal Receiving Window and digital display

Front view of remote control

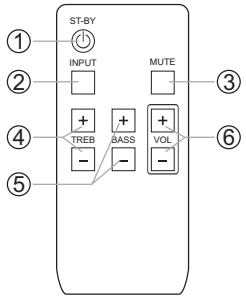

1.St-by:standby
2.Input: select input mode
3.Mute: press the key to make the system in muting
4.Treble+/-: adjust the treble of speaker system
5.Bass+/-: adjust the bass of speaker system
6.Volume -/+:adjust the speaker system's volume to your desired level

***Back View**

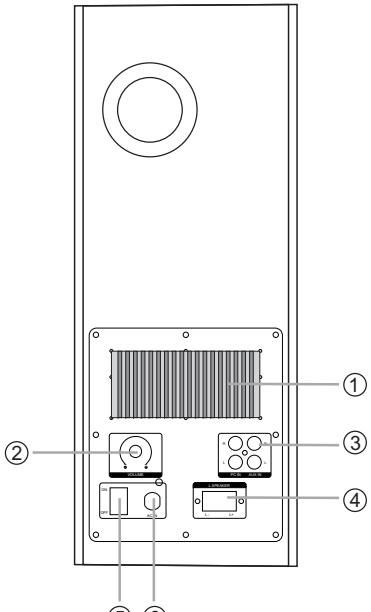

1.HEAT SINK
2.VOLUME CONTROL
Adjust the speaker system's volume to your demanding level
3.AUDIO INUPUT
2.0 channel audio input jacks
4.OUTPUT
To L speaker
5.POWER
Press the switch ON or OFF
6. POWER CORD

System Connection

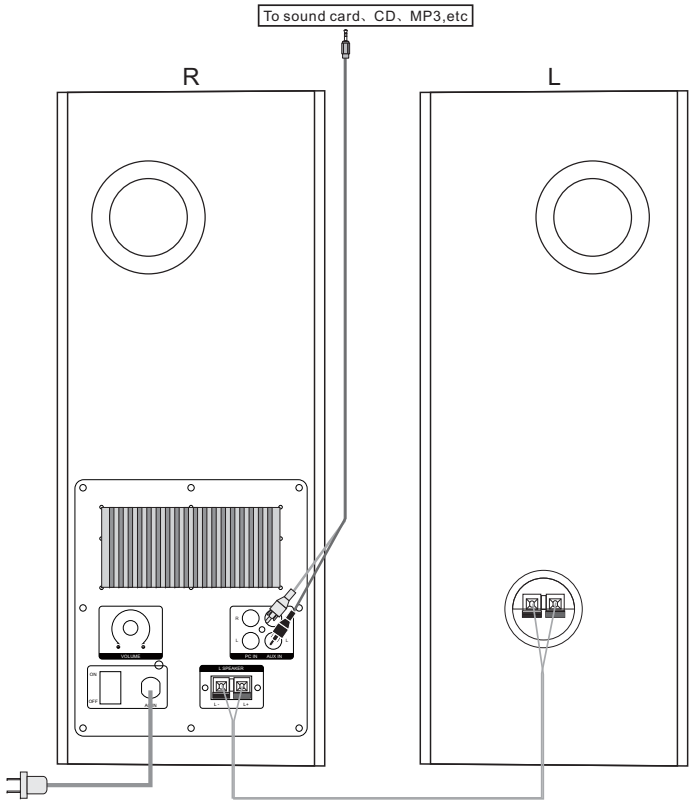

■Please note the correct placement of speaker is shown in the above picture.

1.Connect one end of the speaker cable to the L+ & L- audio output sockets on the back of the main speaker, the other end to the audio input sockets on the back of the sub speaker, please note to m the color, red to red and black to black.
2.Connect the RCA plug of the audio cable (one end with RCA plug, the other end with 3.5mm stereo plug) to the audio input jacks of the main speaker, the 3.5mm stereo plug to the audio output jack or other audio equipment.
3.While connecting to such as CD player, MP3 or PC, etc., please connect the audio cable to PC IN while connecting to such as VCD or DVD player, etc., please connect the audio cable to AUX INPU
4. Make sure all the cable are connected correctly, then connect the power cord to AC outlet.